


1. Instrument introduction and operation
- 2, the usage of folding function
- 3, battery disassemble, charging, maintenance
- 4, PAS and speed shifting skills
- 5, maintenance
- 6, warranty service regulations

Accessories name of the E-bike



Instrument introduction and operation (Screen function diagram)

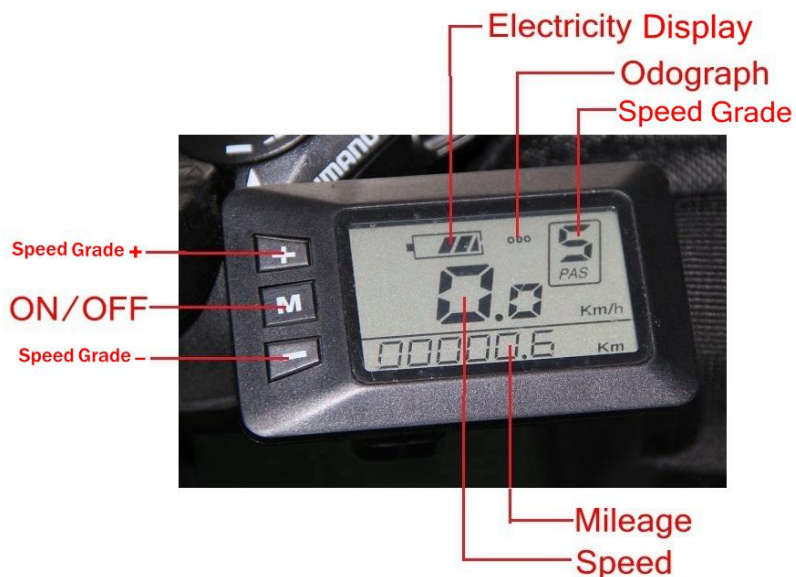

Riding Mode	Electric Power Assist (5 Shifts)
	Pure Electric (5 shifts)
	Pure Human Riding

Switch on and off: Long press “M” button for five seconds to turn the meter on/off, quick press M button to check solo/total mileage.

Switch Speed Grade : press the +/- button to switch the speed grade

0 grade instructions:

At 0 grade mode, at this time, the motor doesn't work when you turn throttle grip, and the human riding has no electric power.

Speed Grade 1-5 instruction :

Speed Grade 1-5, turn the throttle grip, the motor works , and PAS starts at the same time. At this time, different assist and speed are matched according to the selected speed grade.


CRUISE CONTROL SYSTEM :

Pure electric riding mode, during riding process (turn rotatable grip + long press - button for 5 seconds) to enters cruise mode (instrument display Cruise sign). Brake cancels cruise. (Cruise mode need to be used in good road conditions, with few pedestrian and vehicles on the road)

the usage of folding function

1Fold the Seat post

Loosen the clamp and press the post
Down to the lowest position and lock

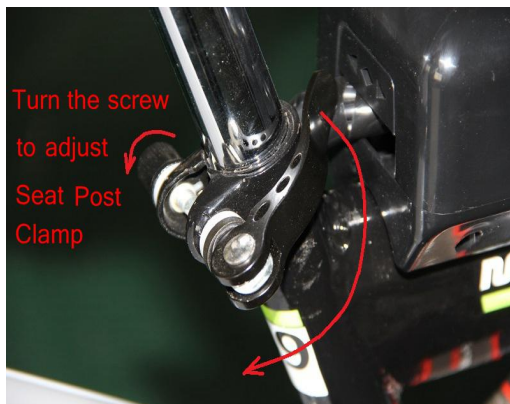

2 Fold the pedal

Push inward and then turn down



Press the pedal to fold it

3Fix the handlebar




Fix the Handlebar Step 1
Insert the Stem into the Head Tube




Fix the Handlebar Step 2
Turn the bolt to tighten the stem


4Fold the frame

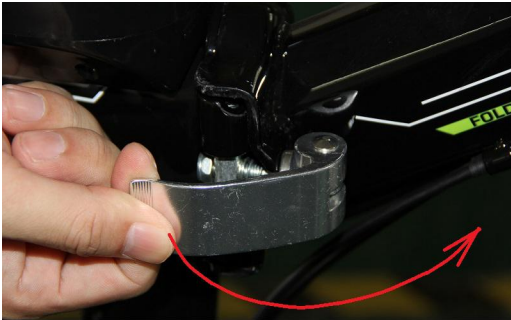

Fold the Bike Step 1
Turn the Buckle

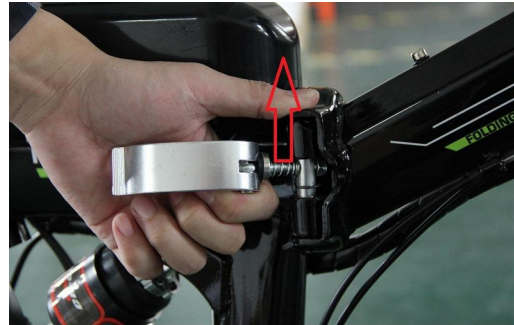

Fold the bike Step 2
Lift up the bolt

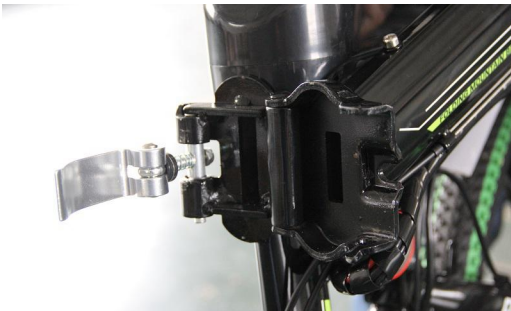

The bike is folded correctly




The effect picture when the bike is folded




The effect picture when the bike is folded

Fix the battery bag

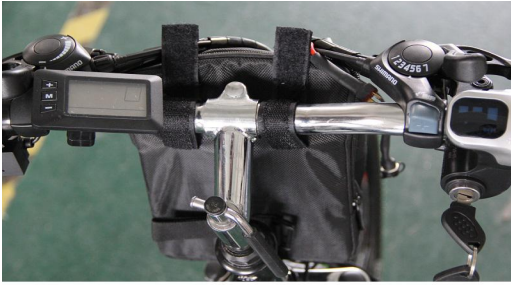

Fix the Battery Bag Step 1
Stick the upper HOOK&LOOP

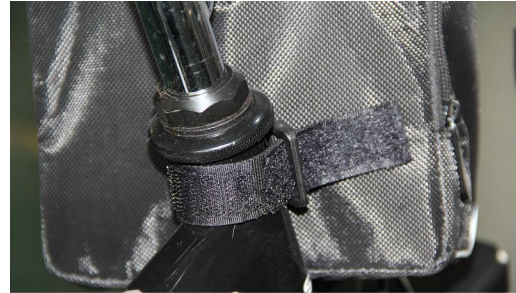

Fix the battery bag Step 2
Stick the lower HOOK&LOOP




The battery bag is fixed correctly

Connect the electricity cable :



Electricity Cable Connection Step 1
Take the plug of the Controller

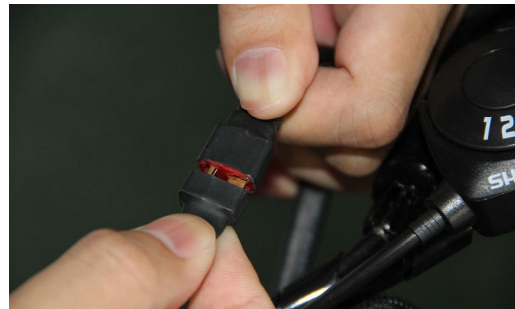

Electricity Cable Connection Step 2
Insert the plug into Battery Cable



The Electricity Cable is Connected

How to start the E-bike :



How to start the E-bike


Step 1, Turn the key ←

→ **Step 2, Long press
"M" Button**

How to fix the mudguard:



Fix the rear Fender
Both two holes are okay

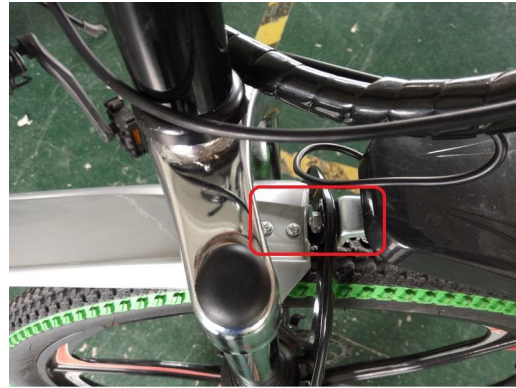

Fix the front Fender
The front fender and front light share the same hole on the fork

How to charge the battery



Connect the Battery Cabel
and the charger Cable



Charging the Battery

Warranty		
Parts	Period	Service
Battery	12 months	If the battery capacity is normally attenuated by more than 50% within one year (except for human factors), the battery will be replaced for free within 6 months, and will be repaired for free in 7-12 months. (Except for the battery is damaged by water)
Motor	12 months	In normal use, if the motor fails, we will replace the motor for free within 6 months, , we will repair it for free in 7-12 months .
Meter	12 months	If it fails and cannot be recovered, we will replace it for free, (self-modification, man-made damage will not be replaced)
Controller	12 months	If it fails , we will replace it for free,
Charger	12 months	Natural damage, can not be charged properly, free replacement

Light, PAS Switch, Rotatable grip	6 months	Dysfunction, free replacement
Frames	36 months	Natural cracking, desoldering and breaking can be replaced for free
Fork	12 months	Natural cracking, desoldering and breaking can be replaced for free
Shifter,derailleur,Pedal, Handlebar, cassette、	6 months	Dysfunction, free replacement

This product has passed strict quality inspection. According to this warranty card, in case of failure caused by product quality problems under normal use, we will give a free warranty within the warranty period. The warranty date begins from the date of sale. Online sale warranty date begins from the date of the sales order.

1. All parts of the e-bike will be strictly in accordance with the warranty period .
- 2, privately modified controller, battery, charger not covered by warranty.
- 3, gifts, loss parts, packaging accessories are not covered by the warranty.
- 4, human factors damage, not covered by the warranty.

Value-added services:

For maintenance matters not covered by the warranty, the company can also provide paid warranty service, and only charge direct costs such as postage fee and cost, and no maintenance fee.